


Classic Wall Track End-Cap B1030


PARTS LIST

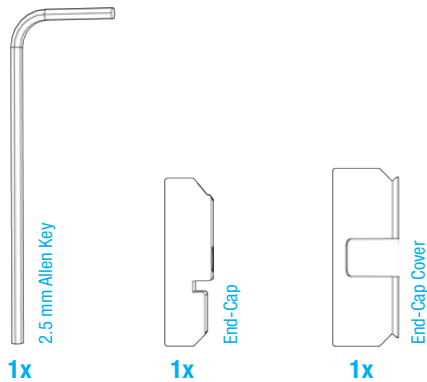


Warning

Do not over tighten End-Cap when installing.


Works on Either End

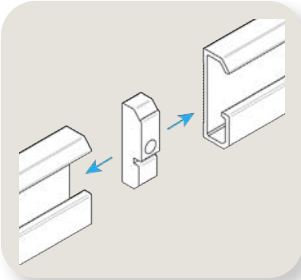


Allen Key

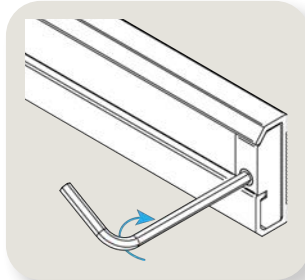


End-Cap Cover

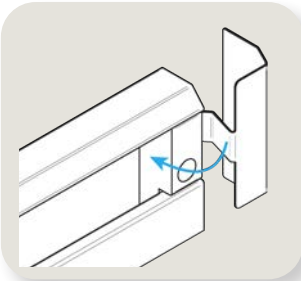

End-Cap Installed

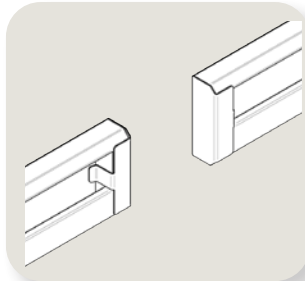

Tab for Easy Removal

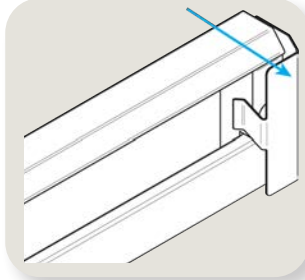

1 Insert & Secure End-Cap

- Remove the cover and insert the End-Cap into the exposed end of the Classic Wall Track.
- Tighten the End-Cap with the provided 2.5 mm Allen key to fix it in place. Do not over tighten.

2 Install End-Cap cover

- Install the cover in proper orientation over secured End-Cap.

2 Remove End-Cap

- To remove the End-Cap from the track, pull the cover outwards, away from the track, loose the screw and remove the End-Cap.

ASHanging.com/classic-wall-track-end-cap

ASHanging.com
866.935.6949

© 2022 AS Hanging Display Systems
All rights reserved
22G-29