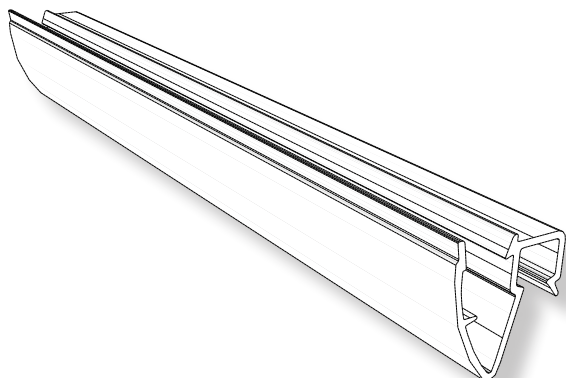



Up Rail Track
A1070**Warning**

The track is supplied with screws, Triple Grip™ plastic screw anchors and mounting clips (Up Connectors) that are suitable for mounting the track to drywall, lathe and plaster, concrete, wood, structural lumber and metal studs. All mounting clips must be used and spaced evenly along the length of the track.




Property damage and personal injuries can occur from track mount failure. To prevent such failure it is the responsibility of the installer to select a suitable fastener for a specific installation.

Straight/Even Ceiling**Non-linear Ceiling****1 Check Ceilings**

- Up Rail Track is rigid and does not bend easily, for the track to click Up Rail Track is rigid and does not easily bend, to correctly fix the track on the connectors the ceiling must be straight and even.
- Normal track orientation is horizontal.

2 Measure




- Measure your ceiling segments. For a perfect look that blends into the decor, install your tracks wall-to-wall.
- Consider End-Caps in your measurements if you use them.

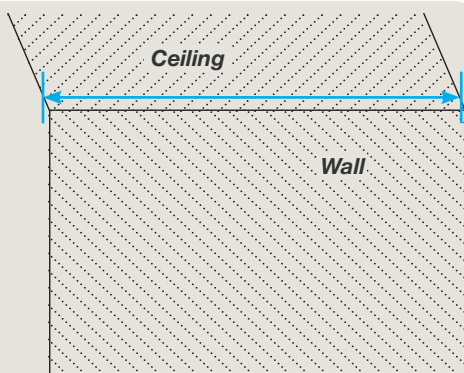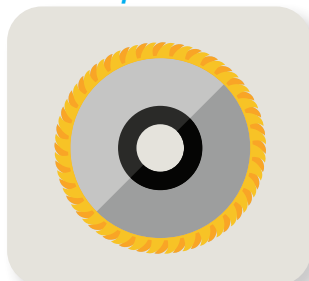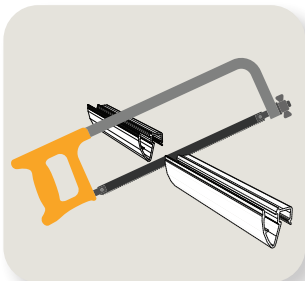**Proper Blade****3 Cut or Trim Track**

- Cut track as needed and remove all burrs. Straight and burr-free cuts will make seams between adjoining track almost invisible.

TIP

Cut the track with a hack saw and miter box or power miter saw with proper blade.

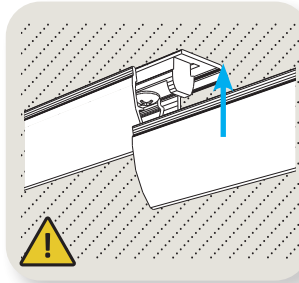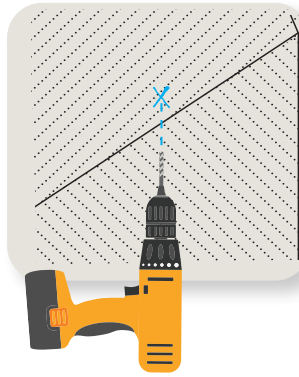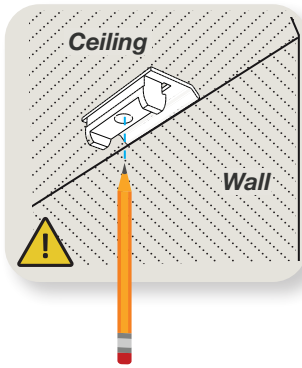

4 Mark Mounting Clip Placement



IMPORTANT

All 6 mounting clips (Up Connectors) must be used.


- Locate the first and last clip approximately 1 inch from the end of a track length. Each subsequent clip is located about 14 inches down the track.
- Use a structural detector or drill 1/16" pilot holes to probe for wood or metal structure.




TIP

When mounting tracks end to end, position clip so that two adjoining tracks will share the one clip.

Anchor

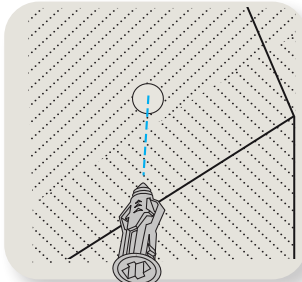



Screw/Connector

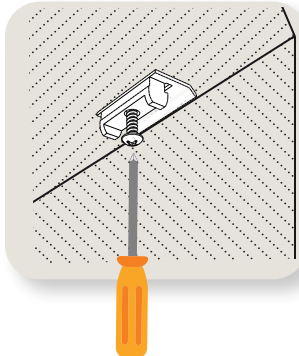

5 Preparing Holes/Attaching Clips

- If no structure is present, expand the hole to 1/4" and insert supplied screw anchors.
- Fasten clips to prepared holes with supplied fasteners.

End-Cap

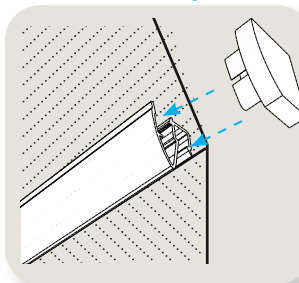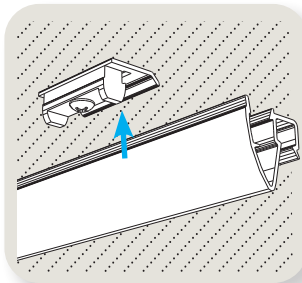

6 Attach Track and End Caps

- Click track over installed Connectors with a solid rap of a hand at each Connector.
- Finish exposed ends with End-Caps (sold separately).