


Shadowline Ceiling Track, Corner A1085HF



PARTS LIST

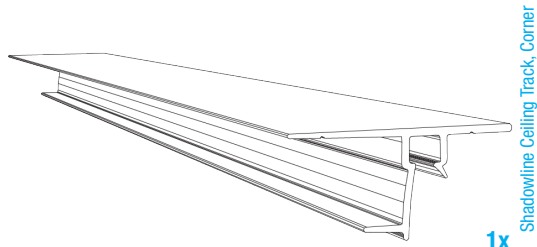


Shadowline Ceiling Track, Corner
1x



Warning

The track has no pre-drilled holes and is sold without fastening hardware, it is the responsibility of the installer to select a suitable fastener for a specific installation/ceiling structure.

Property damage and personal injuries can occur from track mount failure. To prevent such failure, it is the responsibility of the installer to ensure that the entire track length is attached to each ceiling joist.

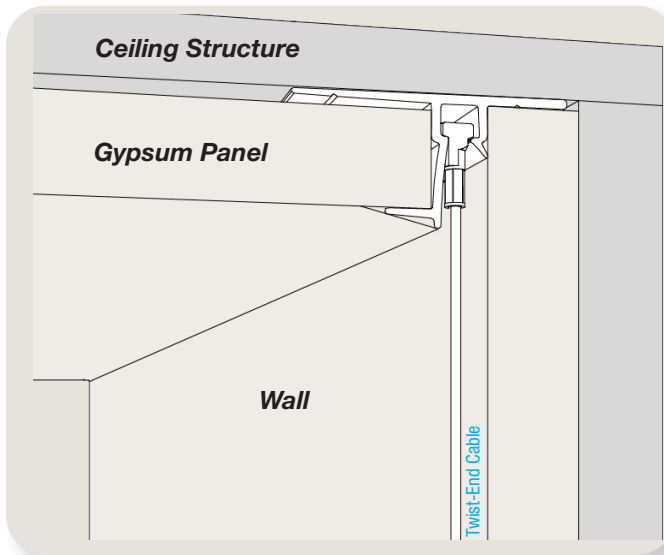

1 Check Walls

- The ceiling structure should be straight, Shadowline Ceiling Track, Corner is rigid and does not easily bend.
- Normal track orientation is horizontal.




NOTE

While the illustrations to the left feature Twist-End cables, this track is also compatible with Twist-End rods.

Straight Wall


Non-linear Wall

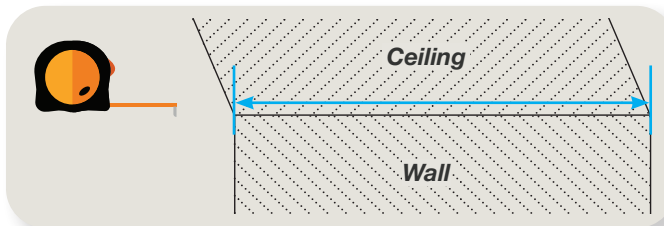

2 Measure

- Measure your ceiling segments.
- Install your tracks wall-to-wall.

Proper Blade

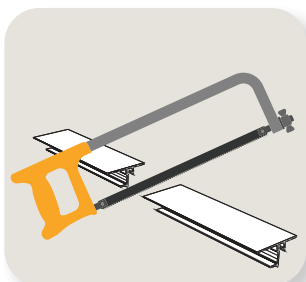


3 Cur or Trim Track

- Cut track as needed and remove all burrs





TIP

Cut the track with a hack saw and miter box or power miter saw with proper blade.

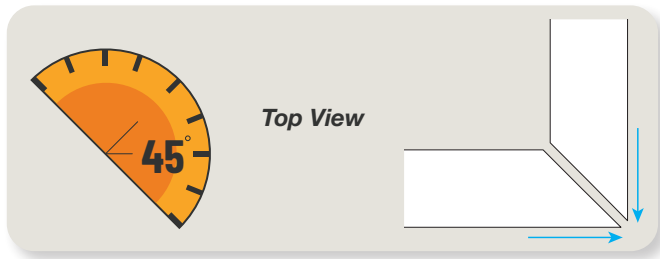

TIP

To join two tracks at an inside/outside 90° corner, cut both ends at 45° to have a perfect fit.

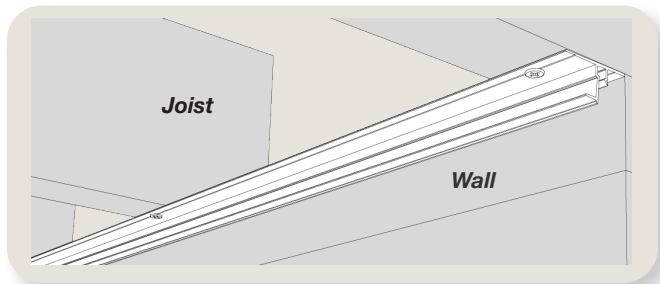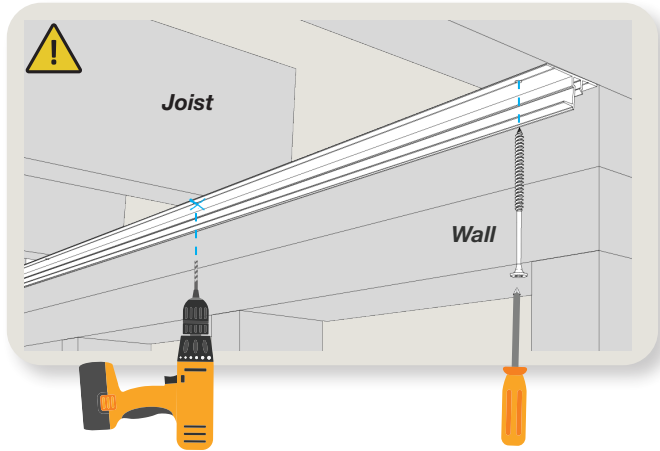

4

Mounting Track



- Fasten track to each ceiling joist while the track is leaning against the wall structure.



IMPORTANT

The track does not have pre-drilled holes. The holes should be drilled on the location of the joist, or self-drilling screws can be used.

- The holes must be made by following the guideline drawn on the largest flange of the track (see drawing below).

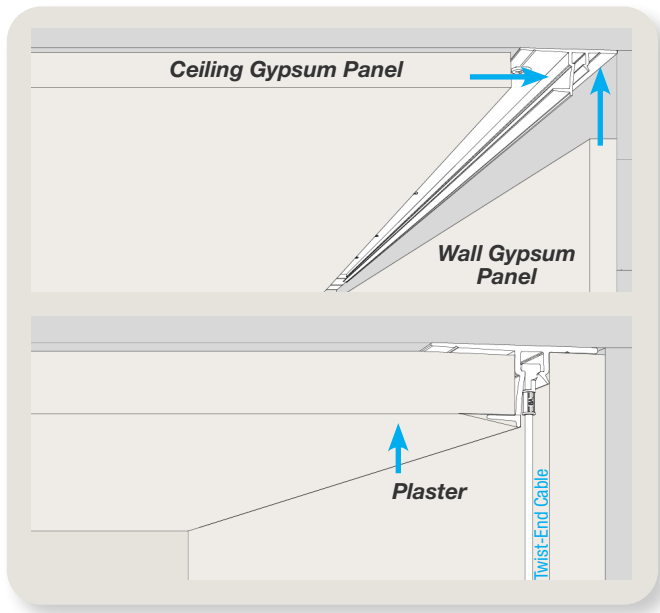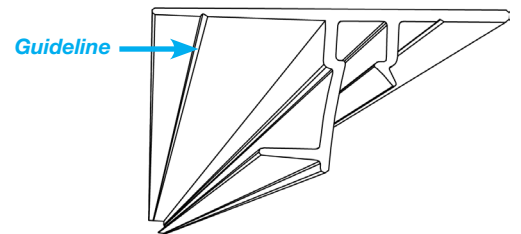

5

Installation of gypsum and plaster

- Install the gypsum panel on the wall first. Slide in the gypsum panel from the bottom side.
- Then insert your ceiling gypsum panel into the dedicated space along the entire track length.
- Complete the installation with the plaster application on the exposed ceiling portion of the rail.



IMPORTANT

Do not put plaster in the opening channel where the cable will be inserted.



TIP

Use a plaster tape on the joint of the Shadowline track and the ceiling gypsum panel.