




COUNTER WEIGHT STABILIZER, CABLE U5205

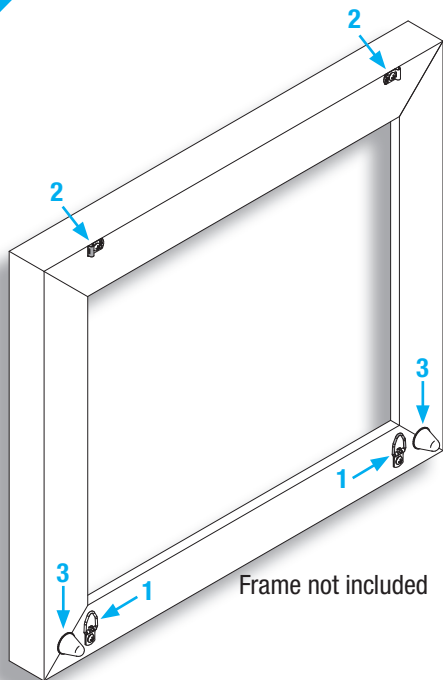

Frame not included



Warning

It is the responsibility of the installer to select the correct fastener for a particular installation.

Failure to do so may cause property damage and/or personal injury.



D-Ring



Cable guide



Bumper

INCLUDED CONTENT

1 Install D-Ring

- With supplied screw, or other screw of your choice, fasten D-Ring as shown to the bottom rail back-side of frame. Repeat for left/right edge.

2 Cable Guide

- With supplied screw, or other screw of your choice, fasten Cable Guide in-line and above the D-Ring to the top rail back-side of the frame as shown. Repeat for left/right edge.

3 Bumper

- Remove protective paper to reveal adhesive on rear of Bumper and apply to frame near each of the D-Rings.

4 Install Cable and Hook

- Thread a cable/cord from the top through the Cable Guide. Then through a hook of your choice. (Shown with a Mini Hook) Tighten hook and attach to the D-Ring. Trim cable/cord end.

