




Up Rail Track A1070

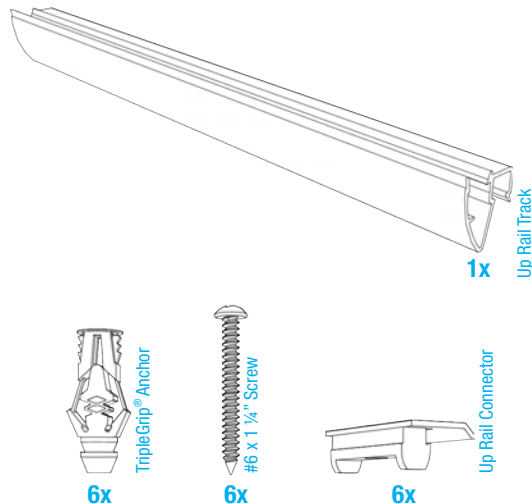

PARTS LIST




Warning

The track is supplied with screws, Triple Grip® plastic screw anchors and mounting Up Connectors that are suitable for mounting the track to gypsum panels, lathe and plaster, concrete, wood, etc. All mounting Connectors must be used and spaced evenly along the length of the track.

Property damage and personal injuries can occur from track mount failure. To prevent such failure it is the responsibility of the installer to select a suitable fastener for a specific installation.


1 Check Ceilings

- Up Rail Track is rigid and does not easily bend. To correctly fix the track on the Connectors, the ceiling must be straight and even.
- Normal track orientation is horizontal.


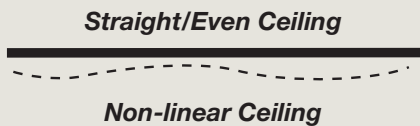


2 Measure

- Measure your ceiling segments. For a perfect look that blends into the decor, install your tracks wall-to-wall.
- Consider End-Caps in your measurements if you use them.

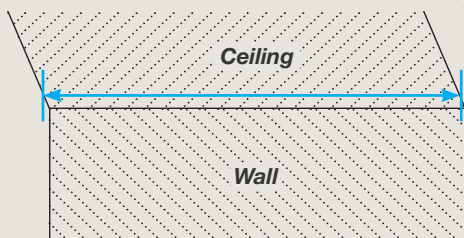

Proper Blade

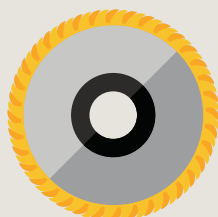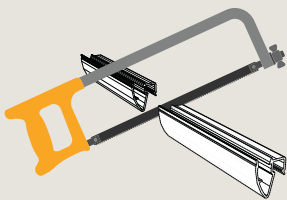

3 Cut or Trim Track

- Cut track as needed and remove all burrs. Straight and burr-free cuts will make seams between adjoining track almost invisible.



TIP

Cut the track with a hack saw and miter box or power miter saw with proper blade.



TIP



To join two tracks at an inside/outside 90° corner, cut both ends at 45° to have a perfect fit.




Top View




Connector

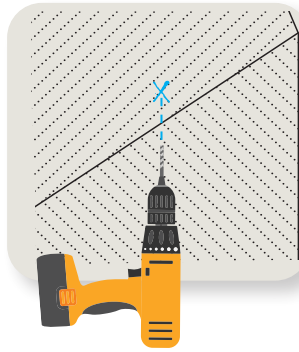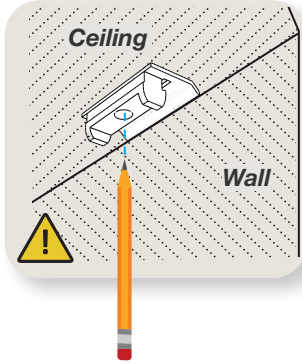


Adjacent Tracks

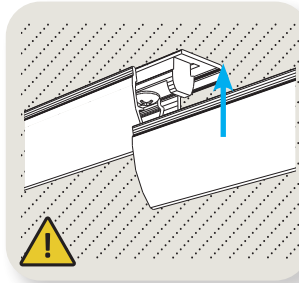


Anchor

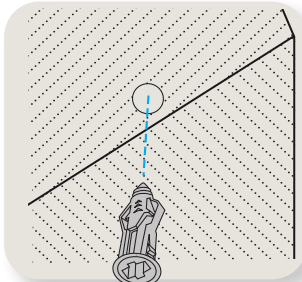


Screw/Connector

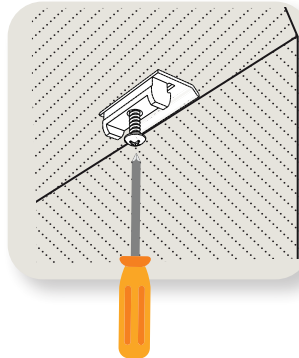

Track Installation

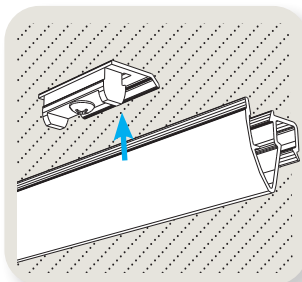

End-Cap

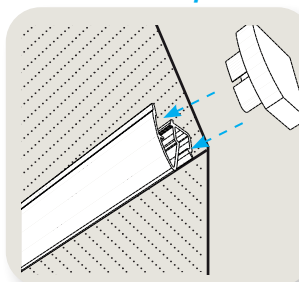

4 Mark Mounting Clip Placement



IMPORTANT

All 6 mounting Up Connectors must be used.

- Locate the first and last Connectors approximately 1" from the end of a track length. Each subsequent Connector is located about 14" down the track.
- Use a structural detector or drill 1/16" pilot holes to probe for ceiling joists.



TIP

When mounting tracks end to end, position Connectors so that two adjacent tracks will share one Connector.

5 Preparing Holes/Attaching Clips

- If no structure is present, expand the hole to 1/4" and insert supplied anchors.
- Fasten Connectors to prepared holes with supplied fasteners.

6 Attach Track and End-Caps

- Click track over installed Connectors with a solid rap of a hand at each Connector.
- Finish exposed ends with End-Caps (sold separately).